

**Reworking Area Array Devices**  
**Patrick McCall, Senior Product Manager**  
**PACE Incorporated**  
**Annapolis Junction, Maryland, USA**

**Introduction:**

Over the last several years, area array packages have become the package of choice in modern electronics design and manufacturing. There are several obvious reasons for the movement away from traditional leaded packages that include increased I/O per unit of area on the PCB, wider capability and functionality, and higher production yields. Additionally, they allow electronics manufacturers to respond to customer demands that include:

1. The demand for smaller products,
2. The demand for higher power and increased performance in products,
3. The combining of functions in products such as the combining of internet access, email, palm-top computing, and video in cellular/mobile communications devices.

Because of the demands identified above, BGA applications are now becoming CSP and Flip Chip applications that are being enhanced further by the development of micro-via technology and wafer level packaging. Additionally, we are beginning to see stacked CSPs as well as MCM type packages containing several CSPs. The telecommunications and consumer electronics industries are truly driving the packaging and interconnect technology development in microelectronics. As a result, CSPs and Flip Chips are now an integral part of most communication and personal electronics devices. As the number of these packages used increases, package cost will come down and the specialized technology to manufacture, attach, and apply them will become more accessible and their use will become even more widespread.

Even though a handful of industries are truly pushing the technology envelope when it comes to maximizing I/O count on small, densely populated PCBs, the wide spread acceptance of micro-electronics will ultimately benefit all industries. Over the last decade, we have seen products that once contained numerous PCBs evolve into products with one PCB that are 75% or more percent smaller with capability not yet imagined 10 years ago. Additionally, component types that have been available in traditional leaded configurations are no longer available in any package other than an area array package.

In the quest for the next generation of size reduction, smaller and smaller components will become even more wide spread than they are today. With each generation of smaller and more powerful products, new challenges are created when reworking or repairing assemblies. Area arrays bring with them special process considerations when rework and repair is required. These include higher levels of process control, more precise control/application of heat, lead free solder considerations, and advances in component construction.

An issue related to reworking area arrays with tiny solder spheres is the structural stability of the interconnection between the device and PCB. One of the ways to add strength and robustness to micro-interconnects is to use underfill. When underfill is used, rework is usually impacted significantly with respect to process limitations, additional procedures, higher training requirements for technicians, and increased time per repair; all of which means higher rework costs. As a result, reworkable underfills are being used and are available from most manufacturers. Technology evolution will always pose challenges and those challenges will be solved in due time. It is interesting to note that as OEMs and Contract Manufacturers continue to try to lower labor costs, if not eliminate them through automated equipment, the labor cost associated with rework is ever increasing due to the higher level of skill and expertise required to work with the varying and delicate technologies. Additionally, the equipment costs associated with area array rework is also significantly higher than it is for leaded devices. For example, a

solder/desolder rework station can be purchased for a few hundred dollars, an adequate area array rework system will cost at least \$18,000 or more.

As area arrays are finding their way into every product, repair and rework centers will have to deal with them. The procedure/process for reworking area arrays is often very different from reworking standard surface mount components. It is a longer process and of course, there is more opportunity for mistakes. In general, the typical procedure includes the following steps.

1. Removal of Old Package
2. Site Preparation
3. Component Placement
4. Flux/Paste Application
5. Heat Application
6. Inspection

#### **Removal of Old Package and Site Preparation:**

When removing packages from PCBs, the approach should be driven by two things: 1) the reason for the removal and 2) whether or not the component will be reused. When removing a package because it has failed, a removal profile may be developed that uses faster ramp rates and shorter times because we are not concerned about the survivability package. However, when a device is intended to be reused, a removal profile similar to the installation profile (with slow and even heating) or the installation profile itself should be used to achieve reflow. This is also the case when dealing with PCBs and packages that are made from materials that must adhere to strict ramp rate guidelines such as ceramic packages.

Regardless of the approach, proper pre-heating and thorough PCB warming is critical to the success. Removing packages by only applying heat from the top should be avoided. This technique can easily result in pads being damaged or lifted. The amount of heat required to bring the solder balls to melting temperature through topical application will often overheat the rework site and will usually exceed recommended heating ramps. It also causes significant temperature differences between the top and bottom of the device and PCB, which can cause twisting, flexing and damage to micro-vias and other delicate circuitry as well as delamination of the package. Package delamination is a common problem that is becoming more common as layers of different materials are being used in the component's construction.

It is extremely important that all the solder joints under the package are liquidus before lifting the package from the PCB. Rework equipment that utilize devices to automatically lift a package after the removal profile is completed are common and generally work well. However, if they are used, the removal profile must be validated through the use of thermocouples to ensure proper temperatures are reached. Should one or a few solder joints not reach solder melt temperatures and the automated head lifts up, pads can and will be pulled off the PCB. Pads and traces for today's micro area array packages are very delicate and are extremely difficult to repair if damaged.

Another consideration when vacuum cups are used inside of the nozzle is that the vacuum cups shield a portion of the component resulting in uneven heating if they are in contact with the component. Typically, this is not a major issue in larger packages because the longer heating cycles allows the entire package to reach a homogenous temperature. Because small area arrays have typically shorter heating cycles, are thinner and have different materials compositions than their standard cousins, they are more likely to develop "cool spots" under the vacuum cup which can result in non-liquidus solder joints at the point of removal. To avoid pad damage, the duration or dwell time of the reflow phase can be increased. The use of thermocouples when developing and validating profiles should become standard practice in every rework facility. It is also important to place thermocouples on the outside edges of the array as well as in the middle of the array to verify proper temperatures have been achieved.

## **Site Preparation**

Once a package has been removed, the rework site must be properly prepared for the next installation. Excess solder on the land patterns with pads larger than .8 mm can usually be removed using one of a variety of conductive desoldering tools available. Other techniques include the use of solder wick or the use of hot gas heating. Removing excess solder from land sites with pads less than .5 mm requires a very delicate hand. If conductive desoldering tools are selected, a light touch and low temperatures must be used. Temperatures over 200 degrees C combined with pressure can easily damage pads or the solder mask.

In general, PCBs that have vias through them are not good candidates for desoldering tools. While the desoldering tip is moved across the land pattern, the vias can become filled with solder. These are not easy to clean out and attempting to do so can result in damage to the via, solder mask or the PCB. Hot gas removal systems or conductive systems incorporating hot gas assisted heating that use Teflon or stainless steel tips at low temperatures and are preferred.

The use of solder wick is effective but again, in the hands of an unskilled operator, using solder wick is risky. When using wick, it is important to place the wick on the PCB and to wipe a hot iron tip over the wick. As the solder melts it will "wick" into the copper braid. Do not slide the wick over the array as pads will be lifted and solder mask will be damaged. Wick specially designed for area array clean up is available.

"Bumping" of the lands is another technique used to remove excess solder by using a soldering iron tip to reflow the solder on the pads and level it. This technique is quite common when placing leaded devices. Typically, a flux is applied to the land site, and then a tinned tip is drawn across the array. The surface tension of the solder is relied upon to control the volume of solder left behind on the pad.

If pads are bumped, they will be rounded, not flat. However, the smaller the pad, the flatter the finished surface will be with this technique. A "sticky" or "gel" flux must be used to hold the package in position. During Soak when the flux is activated and driven off, the package can move and can easily become misregistered to the land array if there is too much solder on the pads. Cautions for the bumping technique include: using old solder can result in poor quality joints and adding too much can result in bridging. The most significant issue is that the solder bumps will not be perfectly level. When installing packages with ball diameters as small as .2 mm, it doesn't take much to end up with an unlevel package, which can result in "opens" or very thin connections.

Once the excess solder has been removed, it is important to properly clean the PCB. The pads must be clean and free from old solder and flux residue before proceeding with the replacement of the package. When installing micro packages, proper cleaning is just as important to the process as the installation profile. Shorter reflow cycles, small amounts of flux used for installation, coupled with the small volumes of solder present in each joint coupled with a dirty or contaminated rework site does not make for a forgiving reflow configuration.

## **Placement:**

Placing area array packages is relatively easy and can be accomplished with commonly available techniques.

Placement by hand is a viable option for packages with solder spheres over 1 mm by using a template or the silkscreen around the land pattern as a guide. A vision overlay system (VOS) can be used to ensure proper alignment and is usually preferred by most operators.



**Figure 1**

Typically, a minimum magnification of 35X is required to provide adequate magnification for proper alignment. A placement precision of .1 to .2 mm in the Z travel is usually adequate for packages with 1mm solder spheres.

To place CSPs, FCs, and other micro-packages successfully a VOS must be used. A minimum magnification of 70x is required. Placement precision in the Z travel should be 50 microns or less. When placing flip chips, 25 microns is needed. When using a VOS for alignment, it is usually desirable to have a fixed location for the component to be picked up by the vacuum nozzle within the reflow head. See Figure 1.

Often the use of multi colored lighting is beneficial to make it easy for the operator to identify the component and the land pattern on the PCB. See Figure 2. The level of precision required for placement in the Z travel mechanism is directly related to the diameter of the solder ball itself. Precision rating requirements should be calculated by using the smallest solder ball diameter that will be reworked. To ensure proper installation, the solder ball must cover at least 50% of the pad on the PCB. In other words, when the device is placed on the PCB the accuracy must be at least 50% in order to take advantage of the self-aligning properties of array packages. See Figure 3. Keep in mind that the more accuracy that can be achieved, the better the result. Packages that are aligned less than 50% can actually migrate one full row of the array, which results in a faulty installation.

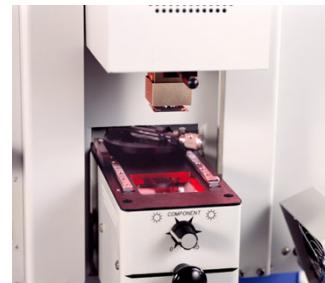


Figure 2

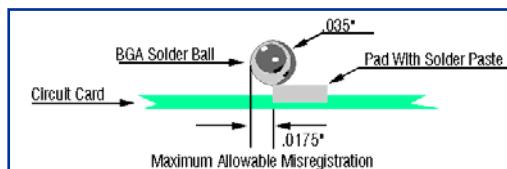


Image courtesy of IBM  
Figure 3

VOSs are readily available with many different options. Typically, a VOS is comprised of a prism that is used to collect two images, one from above (the component) and one from below (the PCB). The images are projected into the lens of a camera. The images are displayed on some type of video monitor or PC and appear as two separate images overlaid on one another. Either the component or the board is repositioned until the solder sphere and land array patterns match exactly. See Figure 4.

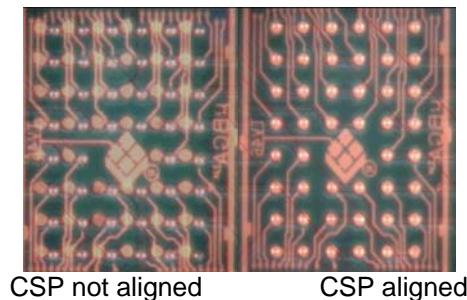


Figure 4

Proper care and maintenance of the VOS is important to placement success. Calibration checks should be performed at regular intervals as indicated by the manufacturer. When adjustment is required, it should only be completed by qualified individuals.

### **Flux/Paste Application:**

Flux must be used to have successful package installation. It may be used by itself or it may be combined with solder in the form of solder paste. Applying the proper amount of flux to the rework site is critical. Too little flux and the solder will not flow correctly, too much flux and out-gassing can occur resulting in voids within the solder joint or flux will be left over which can cause resistivity problems as well as have corrosive effects on the solder joint after reflow. There are a variety of methods for applying flux. Some of the methods are to use a brush or pen applicator, to use a piston driven mechanism to dispense a gel or sticky flux, and to use a flux "dipping" applicator tool. See Figure 5.




**Figure 5**

When applying flux to area array packages, the ideal amount of flux to apply is enough to cover 1/3 of the solder ball. This ensures that enough flux is present to clean and remove oxides while eliminating the potential for out-gassing and excessive flux being left behind. With the introduction of gel flux, applying precise amounts of flux to balls can be accomplished and repeated consistently.

Solder paste should always be used when:

- Solder balls on the bottom of the package are made from 90/10 solder.
- PCBs have bare copper or gold pads on them,
- The PCB may be warped
- The package contains an elastomer layer for CTE differences,
- It is critical to have the same joint geometry as the production assembly and solder paste was used in initial production,
- A specification exists for the joint stand-off height for function or cleaning.

Solder paste can be applied using a variety of techniques. Some of the more common techniques include using spot stencils to apply solder paste to the PCB, using component stencils to apply solder paste to the component, and using dispensing equipment to apply dots of solder paste to each individual pad. It is often easiest to screen paste onto the component directly and to lift the stenciled component off of the stencil using the rework units pick-up mechanism. See Figure 6.

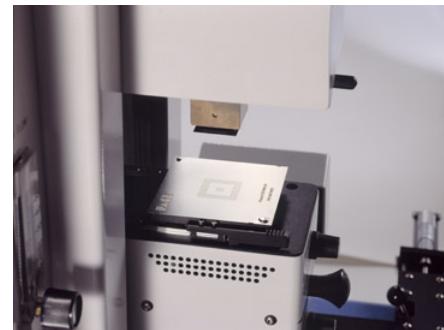

**Figure 6**

Solder paste with ball sizes of #4 should be used for small pad printing. When applying solder paste to standard packages, typically, a paste thickness of .17 to .23 mm is desired. When using solder paste for micro packages, a paste thickness of .1mm to .16mm is desired.

Stencil aperture shape is also an important consideration. Typically, stencils with apertures larger than .2 mm are round and lend themselves to good release. Apertures in stencils designed for paste deposits smaller than .2 mm are often diamond shaped. The diamond shape allows the solder paste to release from the stencil easier than a circular one.

### **Heat Application**

Bottom side heating is usually associated with the “pre-heat” phase of a profile. However, bottom side heating is as important in Soak and Reflow phases if the installation is to be successful while exposing the PCB and package to a minimal amount of thermal stress.

In the “Pre-heat” phase, bottom side heating ensures homogenous temperatures across the board. This keeps the PCB from warping, twisting, or flexing, during the process, which is essential for maintaining planarity of the installation site. Heat application from the bottom of the PCB during the “pre-heat” phase is also used to warm the entire PCB so that heat is not drawn away from the installation site during the rest of the process.

During “Soak”, the bottom side heater should continue to operate while heat is added from the top heater. The combination of top and bottom side heat application allows the installation site and package to reach a temperature of between 140 and 170 degrees C (dependent on the activation temperature of the flux) and to stabilize. The stabilization should be maintained for 30 to 60 seconds, allowing the flux to fully activate and driving off any volatiles in the flux. This is important as it eliminates the potential for out-gassing and prepares the package and PCB for reflow.

During “Reflow”, higher temperatures are applied from the top heater. Top heaters generally operate between temperatures of 200 and 350 degrees C. Air or nitrogen passes through the heater and into a “nozzle” to guide the hot air to and around the package. Often nozzles are vented in such a way so that the hot air is vented up and away from the PCB and adjacent components. See Figure 7. Obviously, this can place a lot of thermal stress on the top of the package. It is important to apply heat slowly and evenly so the entire package warms to reflow temperature uniformly. Temperature differences across a package of as little as 7 to 10 degrees C can cause damage.

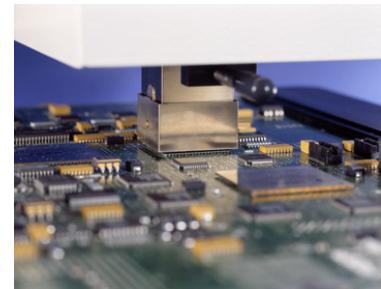


Figure 7

The set temperature of the bottom heater can be maintained or increased during the reflow phase. Increasing the temperature by as little as 15 degrees C during reflow will have a dramatic impact on the package profile. One of the many benefits of adding additional heat from the bottom or “Spiking” during the reflow phase is that lower temperatures can be applied from the top.

Reflow should always be achieved with the lowest temperatures possible. This ensures the safety and reliability of the package as well as PCB. Additionally, by subjecting the package to lower temperatures, there is less chance for temperature overshooting which can result in significant temperature variations between the top of the package, bottom of the package, the solder joint and PCB. By controlling the application of heat from the top and bottom of the installation site, even heating can be achieved. This can be demonstrated in lower temperature variances between the top and bottom of the package and between solder balls located on the outer edge and in the middle of the array pattern.

While standard area array devices look alike, there are significant differences between standard and micro package configurations. Often, they demand different profile configurations when it comes to installation and removal profiles. Physically, they differ in several areas: materials, dimension, mass, and tolerances to temperature. In general, profiles used to install micro packages are shorter than profiles for standard packages. Also, lower temperatures can and should be used when installing micro packages. Because the micro package is essentially the same size as the silicon die, there is no significant encapsulation for protection, heat is applied/transferred directly to the silicon.

The smaller mass of the solder spheres on the micro package, coupled with a very thin package allows heat to be transferred through the component very quickly. When standard BGAs are

installed, heat must be driven through and around the package, which requires a longer heat application period. Therefore, if a profile for a standard package is used on a micro package, the component will become super heated which is something that must be avoided.

As was mentioned previously, a vacuum cup in the nozzle resting on the component can affect profile results. To demonstrate their effect, a micro BGA 46 was installed twice on a PCB from a cellular phone using the same profile parameters. A hole was drilled through the center of a pad in the center of the package. A thermocouple was installed flush with the top of the PCB, contacting a solder sphere. The only difference between the two trials was the addition of the vacuum cup. See Figure 8.

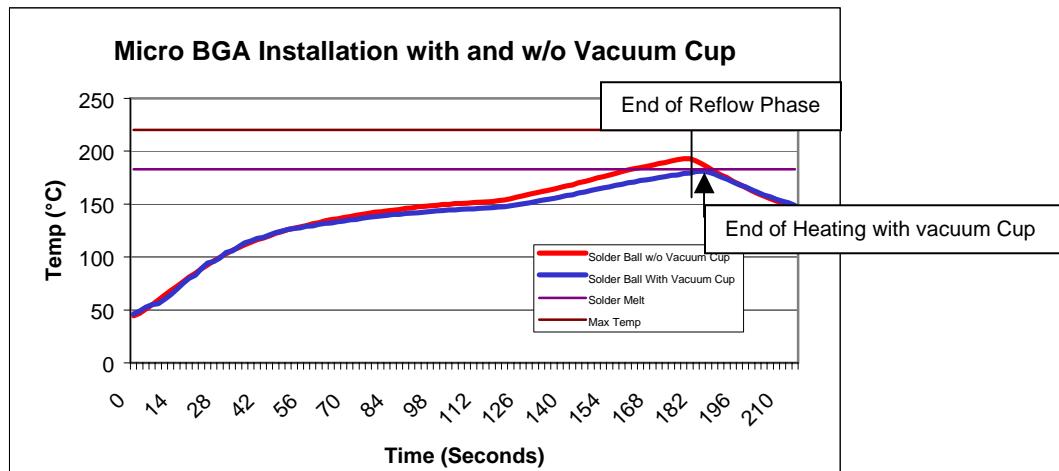


Figure 8

The effects of the vacuum cup is dramatic:

1. Soak and Reflow ramp rates are slower
2. Final Soak Temp is lower
3. Heating continued beyond the reflow phase
4. Cooling was inhibited
5. The solder balls did not reflow.

In this case, the vacuum cup used was round so the edges and corners of the micro BGA were exposed to more heat than the portion of the package under the vacuum cup. This results in higher temperature variations across the entire package which can cause delamination of the package.

There are many methods for applying heat as well as different methods to monitor and control it. Arguments can be made for and against all of them. Heaters used in area array rework equipment are almost always controlled through closed loop structures. This means that the heater is cycled on and off based on the condition of the thermal sensor. In many cases the variation between set temperatures and actual temperatures between area array rework equipment is due to the control sensor placement.

Sensor placement can dramatically affect the result of set temperatures, which is why a valid profile configuration developed on one rework machine does not usually successfully transfer to another. Ultimately the set values on a particular machine are not critical. What is critical, however, is the thermal environment those set temperatures create around the package and PCB. Profiles should always be created and validated using feedback from thermocouples.

Many systems allow profile settings to be adjusted while a profile cycle is running. Usually a PCB will be populated with thermocouples in a number of locations. When developing a profile, it is good practice to place thermocouples:

- on the top of the device,
- on at least one solder ball, 2 is better (inner and outer ball), and
- on the bottom-side of the PCB, both, directly under the rework site and away from the rework site.

Positioning thermocouples in these locations allows:

- monitoring of temperature variations between the top and bottom of the package,
- monitoring of temperature variations between the middle and outer edge of the package, as well as
- monitoring of the thermal environment the solder balls are exposed to.

Monitoring the temperature directly below the rework site is important as PCBs can be subjected to too much heat, as can packages. This can cause damage to circuitry, micro vias, and delamination of the PCB itself. The purpose of the thermocouple on the bottom of the PCB away from the rework site is to ensure the entire board is warmed properly and is not exposed to high temperatures in one location, under the rework site.

Profiling can be accomplished using a site containing a previously installed package, or by performing an actual installation. Either method can be used to develop a reliable profile. However, there are some issues to be aware of with each.

If using a site where a package is already installed, the placement of the thermocouples is important. They must have contact with the existing solder joints. This is best accomplished by drilling through the bottom of the board into a solder joint and affixing the thermocouple with an epoxy/adhesive or other means to secure it. Affixing a thermocouple to the top of the package that is already soldered is easier in most cases, especially when micro packages are involved.

When developing profiles through an actual installation, it is important to make sure the solder balls are touching the thermocouples throughout the entire process. Should a thermocouple lose contact with the solder balls, bad data will be collected. Additionally, it is often difficult to affix a thermocouple to the top of a loose package and successfully maintain contact with the PCB during the process.

Feedback from the thermocouples will assist the operator in adjusting the time and temperature parameters. In general, the following guidelines should be adhered to when developing profiles.

### Ramp and Maximum Temperatures

Acceptable ramp rates and maximum temperatures can be obtained from the package manufacturer. It is wise to select a maximum temperature that allows a margin of safety to the manufacturer's specification.

### Pre-Heat

1. If a "step profile" is desired, the top of the PCB should reach a stable temperature of 95 to 105 °C during pre-heat. Stability is the main goal here. When plotting a curve, the trace should level off at this temperature.
2. If a linear slope is desired, preheat is combined with the soak phase. In this method, the package and PCB are warmed at a constant rate (the ramp rate usually 1 to 3 °C/s) until the desired soak temperature is reached, then the temperature reaches a plateau.

## **Soak**

Soak is a critical step in the process. It is used to activate the flux and to drive off volatiles and excess flux. It is important that a soak temperature between 140 and 170 degrees C (dependent on the activation temperature of the flux) be reached. Ideally, a relatively stable temperature should be maintained for 40 to 60 seconds. This should be extended if liquid flux is brushed on to the PCB or when installing a large package to insure the flux has been driven off. Soak also allows the entire package and PCB to come to a uniform temperature. If the entire package and PCB are the same temperature the rate of temperature increase in response to the additional application of heat during reflow will be the same throughout. This allows for uniform ramping across the entire package.

## **Reflow**

Reflow is the second to last phase in the cycle. During this phase the solder spheres reach solder melt and form the joint between the package and the pads. It is critical that all areas of the array reach solder melt together and that all spheres are liquidus for at least 20 to 45 seconds. Generally, Reflow for micro packages will be a shorter phase than for standard packages. Additionally, lower temperatures can be used for micro packages as they are thinner and have less mass. When developing profiles for micro packages it is very important to not apply too much heat.

The type of solder used in the solder balls is variable that can greatly impact the profile of a component. Lead free solders may be common over the next 1 to 5 years. The reflow range for is defined by: 1) the maximum temperature a component can be exposed to (usually the max minus 10 degrees C) and 2) the melting temperature of solder. Typically, the range for reflow , when using 63/37 solder is between 195 and 220 degrees C. This is a fairly wide and forgiving range. When lead free solders are used on the same package, the reflow range is between 215 and 220 degrees C. This is a much tighter window so slow, even uniform heating is required so the window is maintained. Again, the use of thermocouples to validate profiles results is critical.

Another variable that must be taken into account when profiling is whether or not the component has a heat spreader or not. When heat spreaders are present, the requirement for slow and even heating is more stringent. The greater the variety of materials present in a given component, the greater the likelihood of delamination occurring if heated too quickly.

## **Cool Down**

Cool down is the last phase of the cycle. It is used to bring the temperature of the package, solder joints, and PCB under the package below solder melt temperatures. Cooling should be controlled and a good rule of thumb is to use the same rate for cool down as for ramp up. If the ramp rate were 2 °C/s increase, the cool down rate would be a temperature decrease of 2 °C/s.

Once a profile has been initially defined, it is important to re-run the profile with the determined parameters in a static (non-changing) environment to ensure the results are valid.

## **Inspection**

Once the package has been installed, it should be inspected. A wide variety of inspection methods are available. Usually for area array packages, X-ray systems are the most commonly

used (See Figure 9), followed by video microscopes that look under the component at a 90 degree angle. After visual inspection is completed, electrical testing is usually used to verify the installation.

X-Ray systems range in power from between 35 and 90 Kv. Some systems have adjustable power and others are fixed. One common aberration that plagues technicians evaluating installations is "voltage blooming". When the X-ray power is turned up, voids appear to be larger than they really are. Figure 10 shows the same solder voids viewed at 50 and 70 Kv.



**Figure 9**

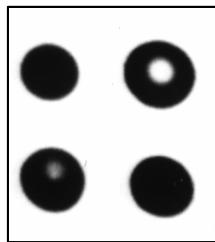


Image at 50 Kv

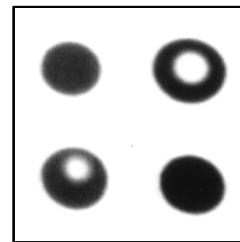


Image at 70Kv

**Figure 10**

As a rule of thumb, you should only apply as much power as needed to view the bonding wires in the component. If too much power is used, the bonding wires will be washed out of the image and voltage blooming is very likely to occur.

The other feature that separates systems apart is how the X-rays pass through the work-piece, either straight down or using variable angle viewing. Systems that have variable angle viewing do so by either rotating the x-ray head around the work-piece or by rotating the PCB under the x-ray head. Generally, variable angle viewing systems cost significantly more. In some cases, they are preferred as they often have software that will complete the analysis of the installation image. However, just as many types of defects can be viewed using a straight down viewing systems but the training requirement for operators is higher as they are required to identify solder joint "signatures" and infer process problems. Straight down viewing systems can also be used on the bench-top, making them more convenient for rework technicians.

Video Inspection Systems (See Figure 11) are not usually as capable as an X-ray inspection system in that they can only see back 4-10 solder sphere rows on the package. However, they can identify certain defect types that an X-ray can miss such as cold solder, incomplete reflow, opens, and joint fractures. Using these two technologies in conjunction with each other is always the best way to insure a thorough inspection.

It is important to note that once defects are identified, improvements/changes must be made to the installation process. The defects identified above are all indicative of process issues that can be controlled through proper storage, handling and heating of area array components and



**Figure 11**

PCBs. Inspection is not a substitution for proper process. It is to be used as an auditing tool to assist in the development of profiles and procedures, which will ensure successful reflow time and time again.

### **Conclusions:**

The use of micro array packages will continue to expand and the ability to rework them will become a critical competency. They offer similar benefits as standard BGA packages but at a much smaller size with higher I/O densities. During rework, it is extremely important to prepare the land array properly by removing excess solder and proper cleaning. Placing micro array packages on the PCB is a similar process to placing standard BGAs. However, it can require more delicate and precise equipment. The proper application of flux and paste (if used) is also critical to the success of the installation. Having the right amount is the key, too much or too little can lead to more rework.

Bottom side heating is one of the keys to success. When used properly, reflow can be achieved at lower temperatures while exposing the package and PCB to less thermal stress. Additionally, increasing the temperature of the bottom heater during reflow allows for a stable and uniform reflow. The use of thermocouples is paramount when developing and validating profiles. Using multiple thermocouples at multiple locations is preferred.

Guidelines for profile development exist and should be used. Manufacturers specifications should also be adhered to and it is good practice to add a margin of safety to maximum temperature and ramp rate specifications. Profiles used for standard BGA packages will not transfer directly to micro array packages. However, they can be used as starting points in developing the perfect profile.

Inspection systems are a tool and should be used in the development process and to verify reflow conditions every so often. When defects are found, procedures, profiles, and equipment performance should be audited. Understanding how to read an X-ray image from a straight down viewing system allows the operator to identify the most common defects without having to spend significant dollars on equipment.